


Installation Instruction: Frame Side, Frame Corner, casting frame with wall ties.

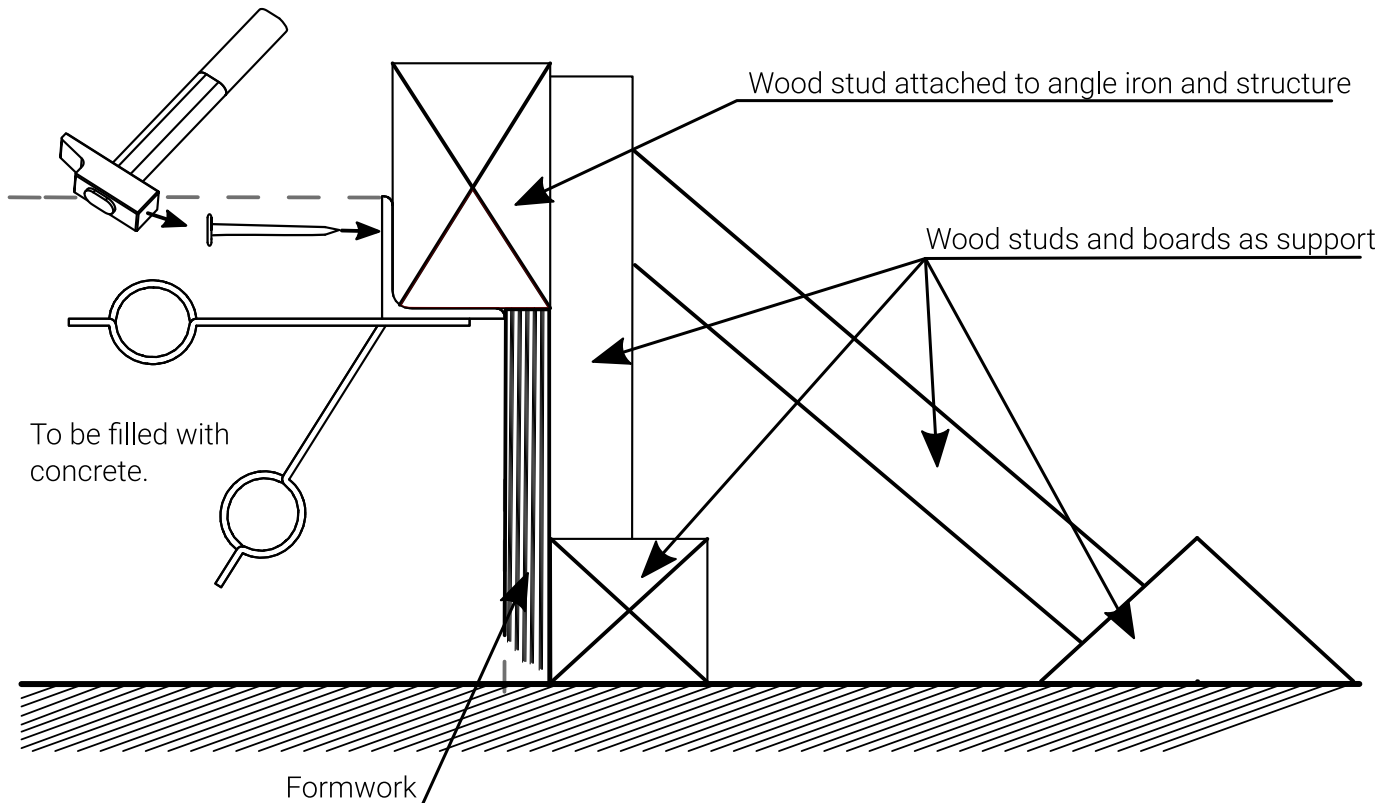

Start by building a formwork.

Attach a wooden stud to the inside of the casting frame. Our frame side feature holes for screws or nails. The wooden stud helps orient and keep the side of the casting frame straight. Then attach the stud to your formwork. Before casting, angle the concrete anchors down so that they go deeper into the concrete.